


# How to connect a Pentair Intelliflo Pump to a Jandy RS Automation System

## Jandy Communication Cable

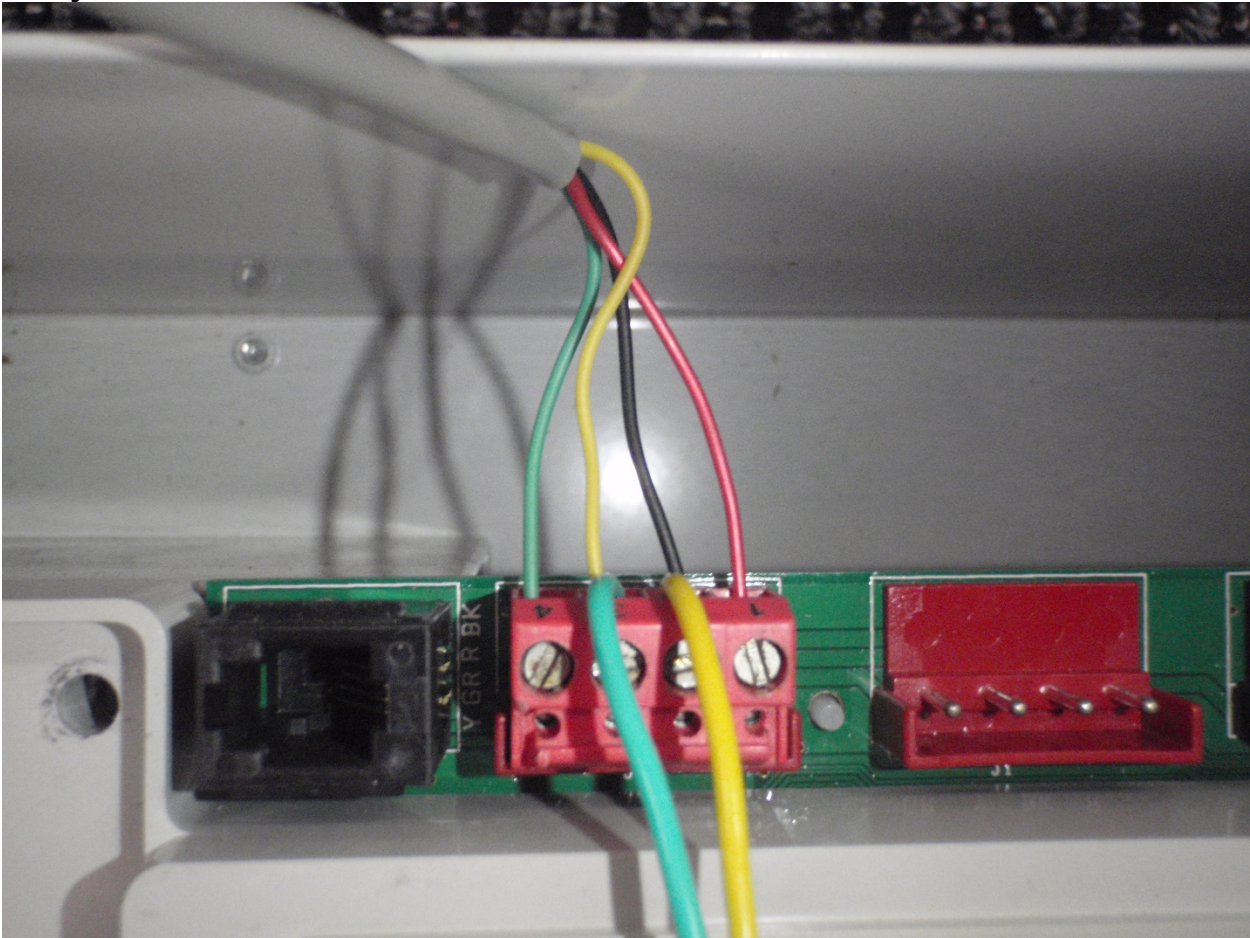

**Penatir Intelliflo Communication Cable**

## Com Port (RS486) Wiring Functions and Color for Pentair and Jandy

Pin Number	Pentair	Jandy	Function
1	Red	Red	+15V
2	Yellow	Black	+Data
3	Green	Yellow	-Data
4	Black	Green	Ground